

## S5000 TECHNICAL BULLETIN

Date	30/10/2021
Topic	Fire Extinguisher Checking
Priority	Reminder

### PROBLEM:

Need to ensure that all on board fire extinguishers are in their pressure window and the 9v battery is not flat.

### SOLUTION:

The fire extinguisher is located behind the driver's seat and the pressure gauge can be checked in-car. Please return any fire extinguishers that are out of the green zone immediately to Racer Industries for servicing.

Also, check the 9v battery in the fire extinguisher control box (located on the RHS of the drivers seat), this can be done by moving the switch to the check battery position and ensuring the check battery led lights up. If it doesn't, replace the 9v battery inside the box.



Any questions please contact [s5000@grmotorsport.com.au](mailto:s5000@grmotorsport.com.au)